


BaByliss® P A R I S

Type 7465E

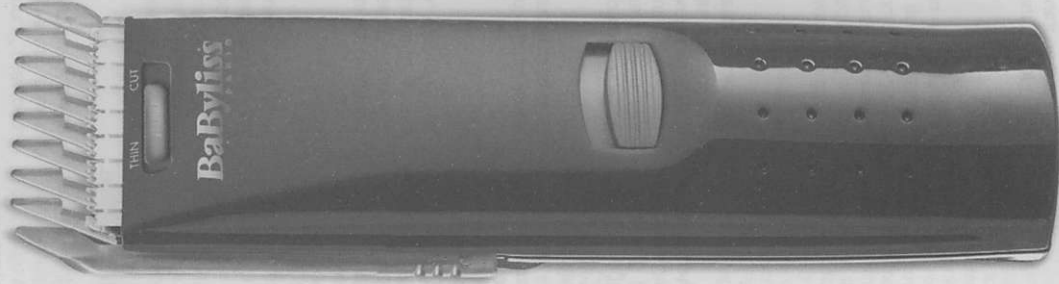

ENGLISH

RECHARGEABLE CLIPPER

This BaByliss Clipper is of high quality and includes attachments perfectly designed to allow you to easily achieve professional standard haircuts at home. The stainless steel blades allow optimum performance. The lightweight, powerful motor needs no adjustment.

The clipper can be used for 30 minutes either cordless or from the mains. Charging time is 14 hours and it has a built-in overcharge protector.

INSTRUCTIONS FOR USE

- Inspect your clipper. Make sure the blades are free from hair and dirt, properly oiled and running smoothly (if not see «Maintenance»).
- Oil the blades each time you use the clipper, whether before or after cutting. Use only the oil supplied and gently add a few drops onto the teeth of the blades.
- Comb the hair until it's tangle-free, then hold the clipper in a comfortable grip. Only use the clipper on clean and dry hair.
- Start by cutting the hair with the integrated comb guide in its longest position in order to check the length. If you want a shorter cut you can adjust a shorter position.

CHARGING

Ensure that the clipper is switched off. Insert the small plug firmly into the clipper, then the mains plug (with transformer) into the wall socket. The charging indicator lamp will light up to indicate that charging has begun. After 14 hours the clipper will be fully charged. A full charge will supply enough power for about 30 minutes hair cutting.

Charge the clipper fully for 24 hours before using it for the first time, or if it has not been used for more than 6 months. If you want to keep the batteries in good condition allow them to fully discharge before re-charging.

USE OF THE CLIPPER ON MAINS

Ensure that the clipper is switched off. Connect to a wall socket. Wait for about a minute, then switch on. **IMPORTANT** - Do not use the clipper in this mode for more than 20 minutes.

HOW TO USE THE CLIPPER TO ACHIEVE DIFFERENT HAIRCUTS

Use the largest comb attachment and trim sides from the bottom upwards. Hold clipper lightly against the hair with the teeth of the comb attachment pointing upwards, yet flat against the head. Gradually lift the clipper upwards and outwards through the hair, trimming just a little at a time. The clipper works most efficiently when it cuts through the hair at its own speed. Never switch the clipper off while in the hair. Repeat around the sides and back of head.

Use of the thinning comb.

Place the clipper on the «thinning» position. The

thinning comb slides in front of the blades. Then use the clipper as usual for thinning the hair.

For longer hair on top of the head.

Use the barber's comb and lift hair on top of the head, cutting over the comb; or hold the hair between the fingers and cut to the desired length. Always working from the front to the back of the head, gradually cut the hair shorter by reducing the space between the comb or fingers and the head. Comb often to check.

Outlining

Requires no attachments. Comb the hair in the desired style. Ensure that the blade is placed against the hairline. With the outline of the hair as your guide, slowly move the clipper over, around and behind the ears.

For the back of the neck and the sideburns.

Hold the clipper upside down, and holding it gently against the skin at the length desired, move downward.

To obtain a «Crew Cut».

Always cut from the back of the neck to the crown, using the longest attachment comb. Holding it flat against the head, slowly move the clipper up through the hair. Use the same technique for the sides, cutting from the bottom to the upper side of the head. Then even it up with the sides. For the top of the head, use the barber comb.

MAINTENANCE

To maintain correct performance, the blades must be regularly cleaned and oiled. It is recommended to oil the blades every time that the clipper is used, using the oil provided. Never use any other product: this oil was formulated for high speed clippers, it does not evaporate or slow down the blades.



NICKEL-CADMIUM BATTERIES

This clipper contains Nickel-Cadmium batteries. To help protect our environment, the Nickel-Cadmium batteries should be removed for safe disposal at the end of the clipper's life.

To remove the battery pack for disposal or recycling, please follow the procedure below:

1. First switch the clipper off and unplug it. Unscrew the screw located in the battery door.
2. Open the door, then remove the batteries.
3. For environmental reasons, do not discard the batteries with your regular refuse. Contact your local authorities for more details on recycling and safe disposal facilities in your area.

SAFETY CAUTIONS

- Do not use the appliance if the cord is damaged. **If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.**
- Do not use the appliance if it has been dropped or if it shows noticeable damage.
- Unplug the appliance after each use and before

cleaning. The unit should be disconnected from the mains when problems arise while the appliance is running or before cleaning or after use.

Do not use near basins or other vessels containing water.

- Close supervision is necessary when any appliance is used by, on or near children or some people with a disability. Store out of children's reach.
- Do not use any other attachments than those recommended by BaByliss.
- Maximum using time without interruption is 20 min.
- This appliance complies with the requirements of Directives 89/336/EEC (Electromagnetic compatibility) and 73/23/EEC (Electrical Safety of Domestic Appliances), amended by Directive 93/68/EEC (CE marking).

UK AFTER SALES SERVICE : WHAT TO DO?
In Guarantee

Enclose your name, address and telephone number, details of the fault and your proof of purchase. Wrap the product well and return to the Conair Service Centre (See attached guarantee card). The Conair Group Limited will either repair or replace your product as appropriate.

Out of Guarantee

Telephone the Conair Service Centre 0870 5 133191 (09.00-17.00 Monday to Friday) for details of the standard repair/replacement fee. Wrap the product well, enclose your cheque (made payable to The Conair Group Ltd.), name, address and telephone number and a note of the fault and return to the Conair Service Centre (See attached guarantee card). For further help or advice on using this or any other BaByliss appliance, call the U.K. Customer Care Line, telephone 0870 5 133191 (09.00-17.00 Monday to Friday).

UK WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL
BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red.

Neither core should be connected to the earth terminal of a three pin plug marked with the letter E or $\perp$ or is coloured green or yellow.

With this appliance, if a 13 amp plug is used a 3 amp fuse should be fitted. If any other type of plug is used a 5 amp fuse must be fitted either in the plug or at the distribution board.

FRANCAIS

TONDEUSE RECHARGEABLE

Cette tondeuse BaByliss est un appareil de grande qualité, muni d'accessoires bien étudiés, pour obtenir facilement des coupes courtes ou d'entretien. Ses lames en acier inoxydable permettent d'obtenir des performances optimales. Son moteur est puissant et léger et ne nécessite aucun réglage. La tondeuse peut être utilisée avec ou sans fil pendant 30 minutes. Sa durée de charge est de 14 heures et elle est équipée d'une protection contre toute surcharge.

UTILISATION

- Inspecter la tondeuse. S'assurer que l'appareil est nettoyé et ne contient pas de cheveux, qu'il est correctement lubrifié et en parfait état de fonctionnement. (si tel n'est pas le cas, voir la section «entretien»).
- Huiler les lames à chaque utilisation de la tondeuse, soit avant, soit après l'utilisation. Utiliser uniquement l'huile fournie et en déposer quelques gouttes sur les dents des lames.
- Procéder au démêlage complet des cheveux, puis tenir la tondeuse en choisissant une bonne prise en main. Utiliser la tondeuse uniquement sur cheveux propres et secs.
- Commencer à couper les cheveux à l'aide du guide de coupe intégré réglé sur la position la plus grande pour faire un essai de longueur. Pour une coupe plus courte, réglez le guide de coupe intégré sur une position plus courte.

CHARGER LA TONDEUSE

S'assurer que la tondeuse est éteinte. Brancher le cordon à la tondeuse puis sur le secteur. La lampe s'allume, pour signifier que le chargement commence. Après 14 heures la tondeuse est chargée. Une charge complète permet d'utiliser la tondeuse pendant un maximum de 30 minutes. Charger la tondeuse pendant 24 heures avant la première utilisation et si la tondeuse n'a pas été utilisée depuis plus de 6 mois. Pour garder les batteries en bon état, éviter de charger la tondeuse trop fréquemment.

UTILISATION SUR SECTEUR

S'assurer que la tondeuse est éteinte. Brancher le cordon à la tondeuse et sur le secteur. Attendre environ 1 minute, puis allumer la tondeuse. Ne pas utiliser pendant plus de 20 minutes en continu.

UTILISATION DE LA TONDEUSE POUR RÉALISER DIFFÉRENTES COUPES

Choisir le guide de coupe le plus grand et commencer par «rafraîchir» les côtés. Procéder du bas vers le haut. Maintenir fermement la



BATTERIES AU NICKEL-CADMIUM

Cette tondeuse contient des batteries au Nickel-Cadmium.

Dans un effort de protection de l'environnement, ces batteries doivent être retirées et proprement mises au rebut lorsque l'appareil ne fonctionne plus. Pour retirer le bloc des piles afin de le mettre au rebut ou en récupération, suivre la procédure ci-dessous:

1. Débrancher tout d'abord la tondeuse. Retirer la vis située sur le compartiment de la batterie.
2. Ouvrir la tondeuse et retirer la batterie.
3. Pour protéger l'environnement, ne jetez pas les batteries avec vos ordures normales. Pour plus de détails sur la récupération des matériaux et les usines de traitement des déchets, veuillez contacter les services d'assainissement de votre région.

CONSEILS DE SECURITE.

- Ne pas utiliser l'appareil si le cordon est endommagé. Si le câble d'alimentation est endommagé, il doit être remplacé par un ensemble disponible auprès du fabricant ou de son service après vente.
- Ne pas utiliser l'appareil s'il est tombé ou s'il présente des traces apparentes de dommages.
- Débrancher l'appareil après chaque utilisation et avant de le nettoyer. Débrancher immédiatement en cas de problèmes en cours d'utilisation.
- Ne pas utiliser l'appareil dans la salle de bains. Ne pas immerger dans l'eau ou tout autre liquide et ne pas utiliser à proximité d'un lavabo ou cuvette contenant de l'eau.
- La plus grande vigilance est nécessaire lorsque l'appareil est utilisé sur ou en la présence d'enfants ou de personnes invalides.
- Ne pas utiliser d'accessoires autres que ceux recommandés par BaByliss
- La durée maximale d'utilisation sans interruption est de 20 minutes.
- Cet appareil satisfait aux exigences essentielles des directives 89/336/C.E.E. (Compatibilité électromagnétique) et 73/23/C.E.E. (sécurité des appareils électrodomestiques), amendées par la directive 93/68/C.E.E. (marquage CE).

tondeuse contre les cheveux avec les dents du peigne pointant vers le haut mais à plat contre la tête. Soulever lentement la tondeuse vers le haut, en ne coupant que peu de cheveux à la fois. La tondeuse fonctionne avec la plus grande efficacité lorsque son rythme n'est pas forcé. Ne jamais stopper la tondeuse dans les cheveux. Répéter l'opération sur les côtés et à l'arrière de la tête.

Utilisation du guide d'effilage.

Placer la tondeuse en position «effilage». Le guide d'effilage se place au-devant des lames. Ensuite, utiliser la tondeuse comme habituellement et effiler les cheveux.

Pour les styles plus longs sur le sommet de la tête.

Utiliser le peigne de coiffeur et soulever les cheveux sur le sommet de la tête, puis couper les cheveux qui dépassent du peigne, ou bien maintenir les cheveux entre les doigts et couper à la longueur désirée. Le mouvement doit toujours aller de l'avant vers l'arrière de la tête, en réduisant progressivement l'espace entre le peigne, ou les doigts, et le cuir chevelu. Peigner les cheveux régulièrement afin de vérifier la longueur de la coupe.

Pour le façonnage du contour.

N'utiliser aucun guide de coupe. Peigner les cheveux dans le style voulu. S'assurer que l'angle de la lame est placé à la naissance des cheveux. En se servant du contour des cheveux comme guide, déplacer lentement la tondeuse au-dessus, autour et derrière les oreilles.

Pour la nuque et les favoris.

Tenir la tondeuse à l'envers et la placer contre la peau à la longueur voulue, puis la déplacer vers le bas.

Pour obtenir une coupe «en brosse».

Toujours effectuer la coupe en partant de la nuque vers le sommet de la tête, à l'aide du guide de coupe le plus long. En le maintenant à plat contre la tête, passer doucement la tondeuse à travers les cheveux. En appliquant la même technique que pour les côtés, couper en partant du bas vers le sommet de la tête. Egaliser ensuite avec les côtés. Pour le sommet de la tête, utiliser le peigne de coiffeur. Couper simplement les cheveux qui dépassent du peigne, au sommet de la tête.

ENTRETIEN

Un entretien régulier des lames de la tondeuse permettra de la maintenir en état de fonctionnement optimal. Il est recommandé d'huiler les lames à chaque utilisation de la tondeuse, à l'aide de l'huile fournie. Ne jamais utiliser d'autres produits pour l'entretien, cette huile ayant été formulée spécialement pour les tondeuses et possédant la propriété de ne pas s'évaporer ou ralentir les lames.